

# 10'wide x 8'high SIDEWALL SCREEN (FRAME CANOPY)

## Broadway Party & Tent Rental

www.BroadwayPartyRental.com

**IMPORTANT** At least 48 business hours BEFORE staking, Customer must call Gopher One (811) to have underground utilities located.


**PARTS INCLUDED:**

4 – 7' Legs that adjust up to 10'	1 – 10' wide x 8' high White Sidewall
4 Corner Castings	5 Zip Ties
4 – 10' Perimeter Poles	2 Ropes/Straps & 2 Stakes or 58# Metal Weights


**CUSTOMER NEEDS TO PROVIDE:** Sledge Hammer (for staking), 5/8" Wrench, Step Ladder

### ASSEMBLY

1. Layout Perimeter Poles to form a square.

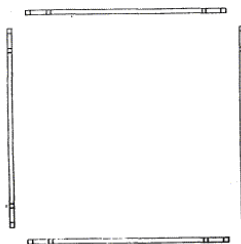


2. Put Perimeter Poles into slots on Corner Castings. Tighten nut on Casting using 5/8 wrench (YOU must provide).

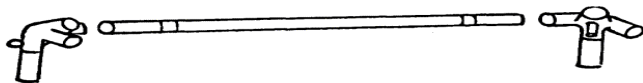

3. Adjust length of Leg 8' to 10' by either screwing out or with bolt & nut. Place 1 Leg at each corner. Pick up one side of frame & put Legs in the bottom of each Corner Casting, insert long pin through hole in Leg.

4. Attach Rope/Strap to frame.

5. Pound Stakes into ground (recommend 4' to 6' from each Corner), leaving about 8" of Stake exposed & tie Rope/Strap to Stake & tighten.

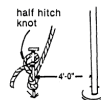

6. Put Zip Ties through hooks on top of Sidewall (recommend using non-glossy side for viewing). Initially attach loose but evenly across 1 Perimeter Pole. Tighten Zip Ties afterwards.

7. Using straps on sides of Sidewall attach by buckling around each Leg.

8. Tighten Sidewall by adjusting Legs, Straps, Buckles, & Zip Ties. Depending on how uneven ground is, how cold & folded the vinyl is, you may have some wrinkles.

**TO DISASSEMBLE** Follow instructions in reverse

"We Rent Celebrations!"

IF EQUIPMENT IS WORKING INCORRECTLY,  
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.