

# 6' x 10' MARQUEE FRAME ENTRY CANOPY

## Broadway Party & Tent Rental

 
www.BroadwayPartyRental.com

**IMPORTANT** At least 48 business hours BEFORE staking, Customer must call Gopher One (8-1-1) to have underground utilities located.

### EXTRA PARTS TO EXTEND TENT TO BE 6' X 20'

<b><u>PARTS INCLUDED</u></b>	3 - 10' Eave / Ridge Bar	+ 3
	4 - 7' Legs	+ 2
	4 - Rafters	+ 2
	4 - Side Castings (PTI)	+ 2
	2 - Ridge Castings (PTR)	+ 1
	1 - 6'x10' Canopy Top	+ 1
	2 - 6' Vinyl Gable Ends	
	4 - Ropes/Straps	+ 2
	4 - Stakes	+ 2
		+ 3 Frame Extensions

### CUSTOMER NEEDS TO PROVIDE a Sledge Hammer

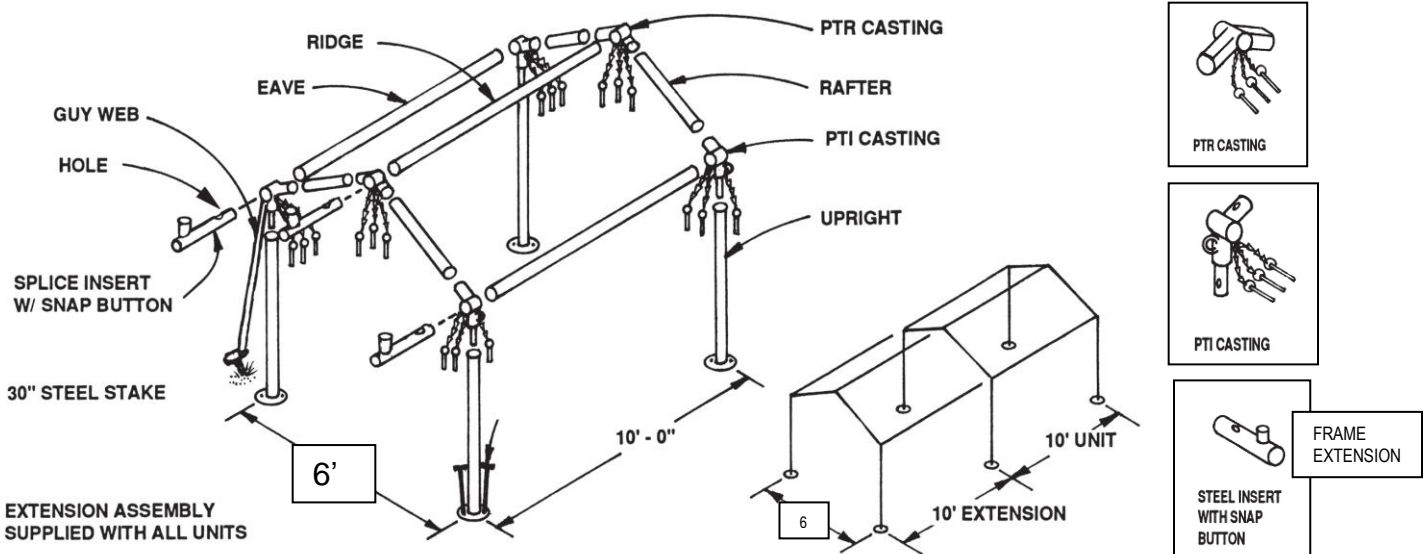



### TO ASSEMBLE - START AT ONE END

1. Insert rafters into PTI & PTR Castings, align holes & pin in place

Insert Ridge / Eave Bars into Castings, align & pin w/ short pins.  
Long pins for upright.



Be sure the insertable ends of Eave / Ridge Bars are facing the same way.  
Inserts should be inserted hole end first.

2. Attach End Rafters by placing Castings at other ends of Ridge /Eave Bars.  
Insert End Rafters into PTR & PTI Casting & pin in place.

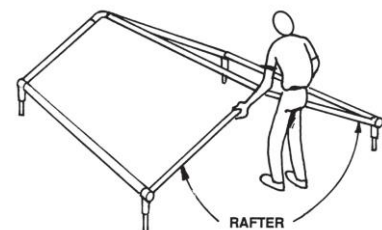
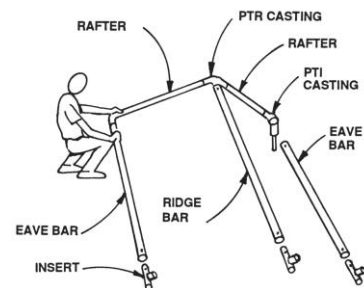


"We Rent Celebrations!"  
IF EQUIPMENT IS WORKING INCORRECTLY,  
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS



3. If extending to 20', attach Frame Extension & additional Eave / Ridge Bars.  
For Extension, the insert should be inserted Hole End first with holes aligned & pin in place.  
This leaves the button protruding for additional sections.

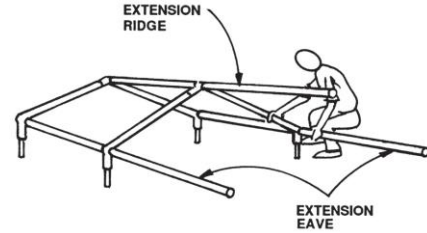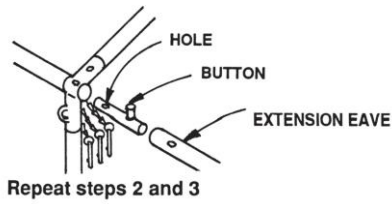


 
 
4. Secure Top to Frame, spread top over frame, mating Velcro strips on ends & middle.  
Using attached strap top to frame & adjust tension on straps to pull top correctly.

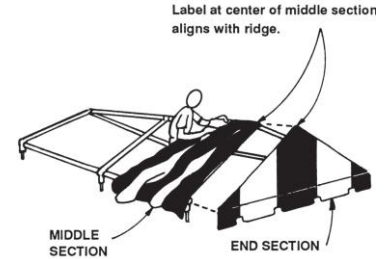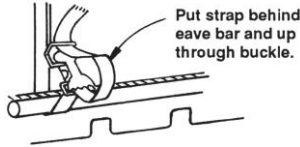

5. With installers on one side, raise & pin in place the upright Legs to PTI Castings. Repeat for other side  
6. Position tent as desired. If Legs are adjustable, raise to proper height.  
7. Attach Ropes/Straps to frame & stake as shown

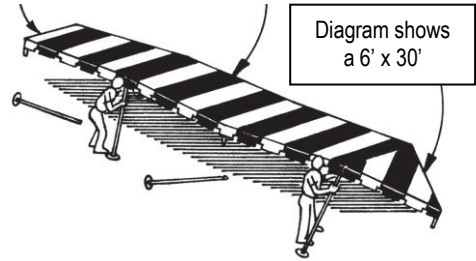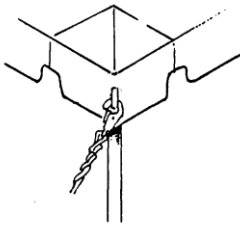

8. Pound Stakes into ground (recommend 4' to 6' from each Corner & straight into ground at a 90 degree angle), leaving about 8" of Stake exposed & tie Rope to Stake & tighten.

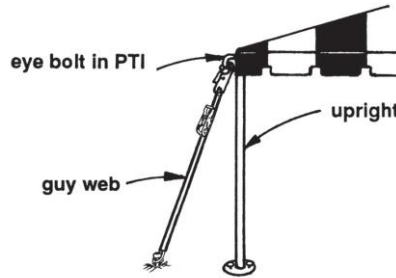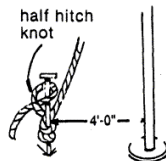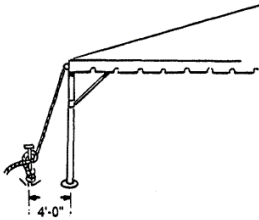

**9. IT IS IMPORTANT TO HAVE TENT STAKED AT ALL TIMES**

Check ropes / straps for tightness. Stakes provided are for average soil conditions. Sandy soil or asphalt may require additional staking. **Proper installation suitable to site condition is the responsibility of the installer.**

**TO DISASSEMBLE** Follow instructions in reverse.

**DO NOT** drag Tent Top across hard or rough surfaces & do not return wet!  
**DO NOT** return Tent parts or Stakes inside Bag with Tent Top!  
**YOU WILL BE CHARGED FOR DAMAGES TO EQUIPMENT!**

**"We Rent Celebrations!"**  
**IF EQUIPMENT IS WORKING INCORRECTLY,**  
**CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.**