

BEVERAGE FOUNTAIN

Broadway Party & Tent Rental

763-424-6155

www.BroadwayPartyRental.com

BEVERAGES: Beverage Fountains are designed to circulate CLEAR beverages. **DO NOT** use beverages with pulp, seeds, fruit, rind, ice cream, or other foamy punches. It will restrict the flow of beverage & clog the pump. (If pulp is used you will be charged an additional **\$20 PULP Fee** - we will know whether pulp, etc was used when we clean the Fountain. This may take a day or 2 to determine.)

OPERATING INSTRUCTIONS: Place on sturdy, level surface & pour a **minimum** of: 6 quarts for a 3-Gallon, 10 quarts for a 5-Gallon & 14 quarts for a 7-Gallon; of a pre-chilled pulp-free beverage into lower bowl & turn switch to on. If beverage does not circulate within one minute, turn switch off for 10 seconds. Repeat as many times as necessary until beverage flows freely. If this procedure fails, pour beverage into the top reservoir, with switch in on position until pump is activated.

IMPORTANT INFORMATION: DO NOT run Fountain dry or immerse Fountain's base in water. Fountain should be plugged directly into 6 amp outlet. We suggest you **DO NOT** use any extension cord, instead plug Fountain directly into electrical outlet. If extension cord is necessary use a 10 or 12 gauge cord only.

Return clean to avoid a \$15 Cleaning Charge!

CLEANING INSTRUCTIONS: After use, **DO NOT DISASSEMBLE**, simply empty out remaining beverage & fill lower reservoir with 2 gallons of plain warm water, let circulate for five minutes. Empty the Fountain & repeat again. Wipe dry with soft cloth. The fountain is subject to a cleaning charge, if returned dirty.

DO NOT use scouring pads or any type of abrasive for cleaning.

DO NOT disassemble or take Fountain apart in any way – OR YOU WILL BE CHARGED AN ADDITIONAL \$40.

**TRANSPORT Fountain in the case provided to prevent damage –
The case is large & will not fit in a car!**

HELPFUL HINTS:

1. Pre-cool beverage when possible to at least 36 degrees before adding to Fountain.
2. To chill beverage: use chunks of ice floating in bowl, or ice cubes in plastic bag, or several pieces of dry ice floating in bowl, or acrylic ice cubes. Fountain does NOT chill!
3. When using carbonated beverages, the carbonation will dissipate after 10 to 20 minutes of re-circulation in Fountain. It's beneficial to add smaller quantities of beverage to the Fountain periodically, from time to time, to maintain carbonation.

“We Rent Celebrations!”

**IF EQUIPMENT IS WORKING INCORRECTLY,
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE**