

CHORAL RISERS

Broadway Party & Tent Rental

763-424-6155

www.BroadwayPartyRental.com

QUICK FACTS: Wenger Tour Master Choral Risers have 3 grey carpeted rows. Each row is 6' long with an 18" deep step. The bottom row is 8" high, the middle row is 16" high, and the top row is 24" high from the ground. Smaller Step is 4-1/2' & 5' wide, Middle Step is 5' & 5-1/2' wide, Larger Step is 5-1/2' & 6' wide. Each Riser holds 12 people using 3 steps or 16 people using the floor.

SETUP INSTRUCTIONS:

- 1 – Bring Riser to set up area
- 2 – Grasp side of top step
- 3 – Unfold Riser
- 4 – Lay Riser flat on floor, carpet side up
- 5 – Grasp end of top step at hand position decal & place right foot on Riser leg decal
- 6 – Lift Riser toward you until you hear latch pin snap twice. When lifting keep your foot on the leg decal & lean back so your body weight helps pull up Riser.


TAKEDOWN INSTRUCTIONS:

- 1 – Kick latch release forward and at the same time press down the latch lever with your foot
- 2 – Grasp end of the top step at hand position decals and lower the unit flat on floor

RISER SELECTIONS GUIDE

Group Capacity	Units Needed	Space Required
12-16	1	6'0"w x 4'7"d
24-32	2	11'10"w x 5'5"d
36-48	3	17'5"w x 6'1"d
48-64	4	22'5"w x 7'7"d
60-80	5	26'10"w x 8'10"d
72-96	6	30'7"w x 10'10"d

ARRANGEMENTS:

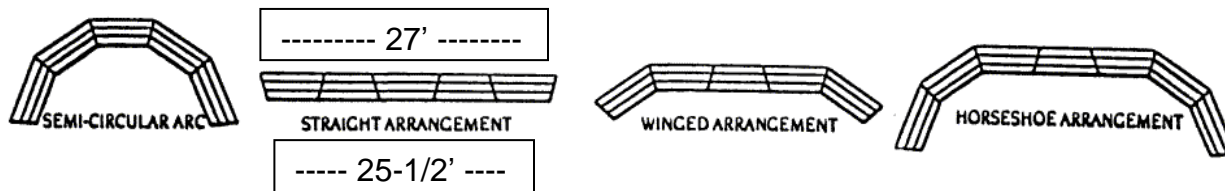

“We Rent Celebrations!”

**IF EQUIPMENT IS WORKING INCORRECTLY,
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.**