

DISCO BALL HEMISPHERE

Broadway Party & Tent Rental

763-424-6155

www.BroadwayPartyRental.com

Chauvet Hemisphere 5, requires electricity – for more information visit our website to read the Manual.

Configuration (Standalone Modes)

Setting this product to operate in standalone mode will allow you to control it without a DMX controller.

- 1) Connect this product to a suitable power outlet.
- 2) Turn product on.
- 3) Select a standalone mode, as indicated in the next sections.

Never connect a fixture that's operating in any standalone mode, whether Static, Automatic, or Sound to a DMX string already connected to a DMX controller. This is because fixtures in standalone mode may transmit DMX signals that could interfere with DMX signals from controller.

Automatic Programs

This fixture has 14 automatic programs, which you can select individually.

To select & enable an automatic program, follow instructions below:

- 1) Press <MENU> repeatedly until **PR.XX** shows on the display.
- 2) Use <UP> or <DOWN> to select an automatic program, from **PR.01** to **PR.14**.
- 3) The selected program will begin executing immediately.

Automatic Sequence

This mode plays the 14 automatic programs in an endless sequence.

To activate the automatic sequence, follow the instructions below:

- 1) Press <MENU> repeatedly until **AUTO** shows on the display.
- 2) The sequence will begin executing immediately.

Sound Active Mode

The fixture has a pre-programmed chase (LED colors and rotation direction) that triggers with ambient sound.

To enable the Sound Active mode, do the following:

- 1) Press <MENU> repeatedly until **SOUN** shows on the display.
- 2) Turn the music on and adjust the microphone sensitivity knob until the fixture starts reacting to the beat of the music.

The fixture will only respond to the low frequencies of the music (bass and drums).

Static Color

In this mode, the fixture will rotate at preset speeds and directions. However, you will be able to control the LED colors.

To enable the Static mode, do the following:

- 1) Press <MENU> repeatedly until **CL.XX** shows on the display.
- 2) Use <UP> or <DOWN> to select a static color combination (from **CL.r-** to **CL.FL**), as shown in the *Menu Map* (page 8).
- 3) The selected static color combination will become active immediately.

The rotation speed and direction are not adjustable in the Static Color mode.

“We Rent Celebrations!”

**IF EQUIPMENT IS WORKING INCORRECTLY,
PLEASE CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.**