

# GROUND FOG MACHINE

## Broadway Party & Tent Rental

[www.BroadwayPartyRental.com](http://www.BroadwayPartyRental.com)  
763-424-6155



If you want haunting **LOW-LYING FOG** just fill the fog fluid container & ice in chiller box & start pumping out chilled, low-lying fog. Or if you want **MISTY FOG** simply don't use ice!

### SETUP INSTRUCTIONS

1. Open transport carton & carefully remove unit.
2. Set Machine on flat dry surface, unscrew knob on top of unit, open top of unit & fill inside with about 4 lbs ice.
3. Remove reservoir cap located on top of Machine.
4. Fill Mister Kool reservoir with American DJ brand fog juice ONLY & replace cap.
5. Insert the water tube into water bucket. When ice melts the water will empty into bucket.
6. Remove remote control from carton & firmly attach to remote control socket located in rear of unit.
7. Plug unit into a matching power supply & flip power switch to on position.
8. Follow the operating instructions for proper operation.

### OPERATING INSTRUCTIONS

This unit has a 5 minute warm up time. After unit is warmed up follow directions for Operation.

**Remote Operation:** The remote allows unit to run automatically or by timer. The remote has "on/off" button that must be turned on to operate unit. A red LED above on/off button will glow when remote is activated.

**Manual:** The remote has a green button, this button allows operation to be controlled manually. Fog will emit as long as this button is pushed, a green LED above this button will glow when manual function is activated.

**Timer:** The timer function allows fog to be emitted at designated intervals. To activate timer function press yellow timer button. A yellow LED will glow when timer function is activated. The "duration" knob will control the length of fog burst. The "interval" knob will control the time between burst. Turning these knobs in clockwise direction will increase their values, turning them in counter-clockwise direction will decrease their values.

***Always be sure to maintain an adequate supply of American DJ® Brand Fog juice™ in the fluid reservoir. Running Fog Machine dry will cause pump failure & clogging. This is the largest cause of failure!***

### TROUBLE SHOOTING

If you experience low fog output, pump noise, or no fog output at all, disconnect & discontinue use immediately. Do not continue pushing remote control's activation button as this may damage unit. Check fluid level, the external fuse or breaker, remote connection & be sure wall outlet is sending power. If all the above appear to be okay & unit fails to operate correctly, the unit may require service.

### SAFETY PRECAUTIONS

- Return in carton provided or you will be charged replacement cost.
- Do not spill water or other liquids into or onto Fogger.
- This unit's intended for indoor use only.
- Never operate unit when its cover is removed.
- Do not attempt to operate unit if it becomes damaged in anyway.
- Never connect unit to a dimmer pack.
- May set off fire alarm if used excessively.
- Never block ventilation holes. Be sure to set unit in an area that allows proper ventilation. Allow at least 6" away from all walls.
- Please route your power cord out of the way of foot traffic. Power cords should be routed so they're not likely to be walked on, pinched by items placed upon or against them.
- Do not attempt to operate if power cord's frayed or broken. Do not remove ground prong from electrical cord. This prong's used to reduce risk of electrical shock & fire.
- Disconnect from main power before making any type of connection.
- To reduce risk of electrical shock or fire, do not expose unit to rain or moisture.
- Be sure fog fluid is kept inside fluid reservoir.
- Be sure the local power outlet match's required voltage for Fog Machine.
- Do not remove top cover under any conditions. There are no serviceable parts inside.
- Disconnect unit's main power when left unused for long periods of time.
- Always set unit in a safe & stable matter.
- **If machine is in constant use, be sure to let it cool down periodically to prevent overheating.**

### MODEL - Mister Kool™

**WEIGHT:** 17.5 Lbs.

**DIMENSIONS:** 19.3" (L) x 12.4" (W) x 10.2" (H)

**FUSE:** 5 Amps

**SUPPLY VOLTAGE:** 110V~120V

**WARM UP TIME:** 5 Minutes

**Heater:** 400 Watts

**TANK CAPACITY:** 0.5 Liter Removable Tank

**OUTPUT:** 2,500 cubic feet per minute

**FLUID TYPE:** Water Base American DJ Fog juice™

**DUTY CYCLE:** Not to exceed 6 hours plugged in.

*\*Voltage is preset at factory & may not be changed*

#### Features:

- Low-lying fog stays near ground, similar to a dry ice effect
- Uses standard fog juice & ice cubes
- No need for dry ice, fog chillers or bulky air conditioning unit
- Includes 10 ft. remote with on/off switch
- Perfect for Bands, clubs, Halloween & theatrical events
- Load up to 4 lbs of ice in chiller box
- Drainage tube for catching water \* 400W heater
- Fog fluid container: 1/2 liter (external)

**IF EQUIPMENT IS WORKING INCORRECTLY,  
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.**