

GAS GRILL

Broadway Party & Tent Rental

763-424-6155
www.BroadwayPartyRental.com

REQUIRES: 1 - 40 pound Propane Tank. Propane Tanks are available for rent. If Customer supplies their own Propane it **MUST BE** a 40 pound Tank & no Service Call will be available.

The Gas Grill is designed to burn propane gas only from a **40 pound LP Tank** which is NOT included but available for rent. Most 40# Tanks last approximately 6-9 hours.

OPERATING INSTRUCTIONS

1. The fire box contains three completely separate, independent burner chambers, & gas supply system with controls for the flame. Because the Grill is designed for use outdoors under varying conditions, the flame height at low setting is limited to about half of the high setting.
2. The Gas Grill has adjustable settings to help control cooking temperature. This may be adjusted by turning the black control knobs on the front of Grill. Each chamber has two black knobs to control the flame.
3. The bottom of fire box consists of three drip pans which are wrapped in aluminum foil to catch dripping grease. The drip pans slide in & out on shelves, which are located in the front of the Grill & must be in place whenever Grill's in operation.

LIGHTING INSTRUCTIONS

1. Make certain all burner control knobs are in the lock/off position before connecting & tightening LP tank. (**LP tanks tighten counterclockwise**). Hold regulator with one hand & tighten with other hand. The off position is when the knobs are turned sidewise. Open valve on LP tank & make sure everything is tight & there are no leaks.
2. Using a long wooden match or long nose lighter, feed through slotted openings in grates above burner.
3. Open slightly one burner in the first chamber & light. When burner lights, adjust knob to desired setting. Once burner ignites, turn on second burner & it will light automatically.
4. Repeat entire procedure for other two chambers. NOTE: The 3 chambers are completely separate & independent.
5. If burner fails to light within 20 seconds or goes out while operating, turn control valve knob to off position & wait for gas to dissipate before relighting.

TO TURN UNIT OFF: Close the knobs on each burner & then close valve on LP tank. Burners off when knobs are sidewise.

Please return clean to avoid a \$65 cleaning charge

CLEANING INSTRUCTIONS: Clean is defined as no visible food or grease.

1. Clean grill by lightly scraping grill surface with a brush or scouring pad. **Do not clean down to bare metal surface!**
2. The exterior surfaces may be washed with dishwashing detergent & water.

SAFETY PRECAUTIONS:

1. Use caution when handling & using propane gas.
2. Gas allowed to escape can result in a fire & explosion.
3. Do not operate Grill indoors or in confined space where escaping gas or gaseous products can accumulate.
4. Do not operate unit where an accidental grease fire could spread to structures or any combustible materials.
5. Parts of grill can become hot enough to cause serious burns. Use protective BBQ mitts or hot pads.
6. Do not leave grill unattended while in operation. Keep children away from grill.
7. Propane Tank must be kept upright.

INCLUDED PARTS:

3 Grates, Folding Leg Base on wheels, Leg brace, 3 drip pans, 3 compartment grill with lava rocks, gas hose attachment

“We Rent Celebrations!”
IF EQUIPMENT IS WORKING INCORRECTLY,
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.