

Over The Counter PATIO HEATER – ZUBRI, 40,000 BTU



Portable (will fit in a car to transport)

Heats approximately an 18' to 20' wide OUTDOOR AREA ONLY

REQUIRES: 1 - 20-pound Propane Tank & a long Stick Lighter (NOT INCLUDED). Propane Cylinders are available for rent. If Customer supplies their own Propane it MUST BE a 20-pound Tank & no Service Call will be available.


INCLUDED: Main Heater Body with Regulator, 3 Legs, Bracing, 1 Skirt packed in a 2-piece box (held closed by straps), & 1 bag with a 38" aluminum Dish Top Reflector

READ 'ALL' INSTRUCTIONS 'BEFORE' ASSEMBLY:


1. Undo straps & open box (make note of how unit is packed to make returning easier)
2. Remove main body of the Heater & install the 3 legs (depress clutch spring on leg & slide leg into leg holder on control cone, being sure spring actuated buttons fully lock into holes in leg holder)
3. To secure Legs with Bracing: locate each of the 3 securing nuts on the Bracing, in each of the key-hole slots at the inside bottom of the 3 Legs, & push downwards to snap in place.
4. Remove Reflector Top from bag & install over folding wing nut at top center of Heater. You may need to unscrew folding wing nut about a 1/2" or more up the threaded rod that its attached to, so the folding part of wing nut will clear hole in top. (Be sure NOT to unscrew threaded rod) After folding wing nut clears top hole, fold it over & tighten until secure (DO NOT OVER TIGHTEN)
5. Be sure valves on Heater & LP tank are closed.



2

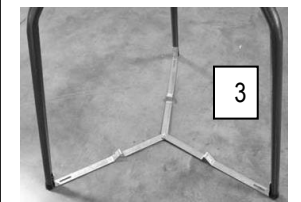

3

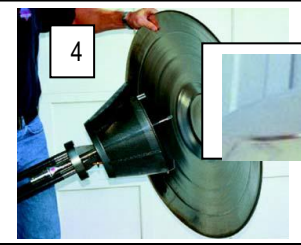


4



6. INSTALLING LPG CYLINDER: Set Propane Cylinder on Bottle Stand. Lift tank onto hook at bottom of heater body, so cylinder is suspended. This is **IMPORTANT**, as the weight of the tank adds stability to the Heater.

7. Connect regulator to tank & open valve on tank. Check for leaks with a solution of soapy water before proceeding.
8. Wrap Skirt around Legs, secure with Velcro & zip. Move Skirt so that zip runs down 1 Leg.

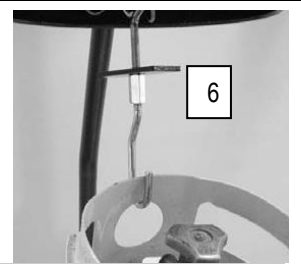

6

9. LIGHTING HEATER:

STEP 1: Turn on gas supply from gas/propane cylinder

STEP 2: Using long stick lighter position flame - hold flame under burner head (SEE 9-2)

STEP 3: Start gas flow- push in control knob & turn counter-clockwise to low, with knob kept pushed in so gas will ignite. **IMPORTANT:** Keep control knob pushed in for at least 15 seconds. This allows the safety thermocouple devise to heat up. If thermocouple is not heated correctly, the gas supply will automatically cut off. If flame goes out for any reason wait 2 minutes & repeat step 2+3.

TO ADJUST HEAT – Push in control knob & turn counter-clockwise to increase heat or clockwise to reduce heat
TURN HEATER OFF + MAKE SAFE - by pushing in control knob & turning clockwise until stop. Flame will go out. TURN OFF gas supply on gas/propane cylinder.




9-2

PACKING HEATER FOR RETURN 1. Let Heater cool (20 minutes) before attempting to disassemble. 2. Screw in folding wing nut on top of Heater as far as it will go, or unit will be too long to fit in the box – DO NOT BEND. 3. Make sure ALL included parts are returned.

IMPORTANT NOTES:

- STRONG WIND MAY CAUSE UNIT NOT TO LIGHT (turn heater off & disassemble to prevent it blowing over when winds exceed 30mph)
- **IT'S IMPORTANT TO KEEP 16" CLEARANCE AWAY FROM HEATER!**
- Some City Ordinances require a Permit for EACH Heater &/or Propane Tank. Customer is responsible to contact the City of your event & arrange all permitting requirements.

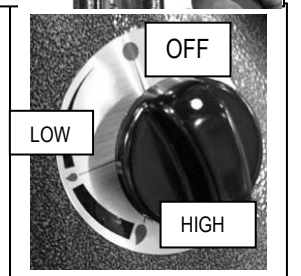

OFF

LOW

HIGH

**IF EQUIPMENT IS WORKING INCORRECTLY,
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.**