

**PATIO HEATER**  
**Broadway Party & Tent Rental**  
**763-424-6155**  
www.BroadwayPartyRental.com

Heats 12' to 15' for approximately 12 hours depending on temperature.

**REQUIRES:** 1 - 20 pound Propane Tank. Propane Cylinders are available for rent. If Customer supplies their own Propane it **MUST BE** a 20 pound Tank & no Service Call will be available.

**ASSEMBLY:** INCLUDED PARTS = Aluminum Dish Top, 3 Wing Nuts, Heater Head, Base, & Regulator

1. ATTACH ALUMINUM DISH TOP TO HEATER UNIT USING WING NUTS PROVIDED.
2. PLACE HEATER ELEMENT INTO BASE UNIT WHILE FEEDING HOSE INTO HOLE ON BASE.
3. RAISE PROPANE TANK HOUSING.
4. ATTACH REGULATOR TO HOSE GOING UP TO HEATER UNIT WITH CRESENT WRENCH.
5. ATTACH REGULATOR TO PROPANE TANK.
6. OPEN TANK & CHECK FOR LEAKS.
7. DEPRESS & TURN FLAME CONTROL KNOB (LOCATED ON HEATER UNIT) TO PILOT FOR 1-3 MINUTES TO PURGE HOSE OF AIR.
8. TURN FLAME CONTROL KNOB TO OFF FOR 10-15 SECONDS TO ALLOW FOR DISSIPATION OF PROPANE FUMES.
9. DEPRESS & TURN FLAME CONTROL KNOB TO IGNITE. MAKE SURE TO KEEP CONTROL KNOB DEPRESSED FOR 2-3 SECONDS AFTER PILOT LIGHTS.
10. TURN CONTROL KNOB TO HI TO TEST UNIT.
11. USE CHAIN TO SECURE TANK & THEN LOWER TANK HOUSING.

**IMPORTANT NOTES:**

- PILOT LIGHT CAN BE LEFT ON FOR SHORT PERIODS OF TIME FOR EASY RELIGHTING OF UNIT.
- PURGE UNIT EVERYTIME NEW TANK IS CONNECTED (see #7)
- STRONG WIND MAY CAUSE PILOT OR ENTIRE UNIT NOT TO LIGHT.
- USING **LONG** FIREPLACE LIGHTER OR MATCHES TO LIGHT PILOT MAY HELP.
- **IT'S IMPORTANT TO KEEP 16" CLEARANCE AWAY FROM HEATER!**

*Some City Ordinances require a Permit for EACH Heater &/or Propane Tank.  
Customer is responsible to contact the City of your event &  
arrange all permitting requirements.*

*“We Rent Celebrations!”*

**IF EQUIPMENT IS WORKING INCORRECTLY,  
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.**