

TENT HEATER

(80,000 BTU & 170,000 BTU)

Broadway Party & Tent Rental

763-424-6155

www.BroadwayPartyRental.com

It's important & helpful to have your electrical source figured out & READY BEFOREHAND!

1. PLACE HEATER & TANK OUTSIDE OF TENT / CANOPY. * (SOME CITY ORDINANCES REQUIRE LP TANK TO BE PLACED & SECURED 10' AWAY FROM HEATER.)
2. POSITION HEATER & CONNECT REGULATOR TO PROPANE TANK.
3. PLUG IN HEATER CORD TO THERMOSTAT PLUG, THEN TO ELECTRICAL SUPPLY (120 VOLTS)
4. A) IF USING 80,000 BTU MODEL, LOCATE POWER SWITCH NEXT TO POWER CORD. SWITCH HAS 3 SETTINGS: OFF, FAN (NO HEAT), & HEAT.
B) SOME 170,000 BTU MODELS DO NOT HAVE AN ON/OFF SWITCH.
5. OPEN PROPANE TANK VALVE. CHECK FOR LEAKS.
6. CHECK HEATER OPERATION BY:
 - a. TURNING TEMP CONTROL KNOB TO HIGHEST TEMP SETTING
 - b. ENSURE FAN MOTOR TURNS ON
 - c. ELECTRONIC IGNITION WORKS
 - d. FLAME IS LIT & STAYS LIT
7. ADJUST TEMP SETTING ON THERMOSTAT TO DESIRED TEMPERATURE.
8. PLACE THERMOSTAT AWAY FROM HEATER DUCTING TO ENSURE ACCURATE TEMP CONTROL.

NOTE: BREAKER RESET BUTTON & INTERNAL GAS VALVE ARE LOCATED BEHIND DOOR CLOSEST TO PROPANE HOSE INLET.

** Some City Ordinances require a Permit for EACH Heater &/or Propane Tank. Some also require Propane Tank to be secured & placed 10' away from Heater. Customer is responsible to contact the City of your event & arrange all permitting requirements.*

“We Rent Celebrations!”

**IF EQUIPMENT IS WORKING INCORRECTLY,
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.**