

HOT PLATE

Broadway Party & Tent Rental

763-208-1357

www.BroadwayPartyRental.com

INCLUDES:

1 butane gas fuel canister; extra are available for sale but there's no refund if unused.

SET UP:

Open cartridge cover. Insert fuel by placing fuel cartridge with guide in up-right position. Make sure cartridge guide & receiving guide always meet. Push down the cartridge fix lever to SET position. If cartridge is not set correctly; gas will leak with hissing sound. Check to see that no sound is coming out.

IGNITION:

Turn knob to ON position until device makes clear click sound. Check that burner is ignited. If ignition not made, repeat the directions. Always check to see that ignitions is effective. If burner knob is in ON position when flame is not burning, there's gas escaping & could cause an accident

TO TURN OFF:

Return knob to OFF position. Then return the fuel cartridge fix lever to OFF position, & take the fuel cartridge out.

FUNCTION & PURPOSE:

This unit is intended to be used as a cooking appliance in commercial foodservice operations only. It's not intended for household use. Failure to clean surfaces before using could cause food contamination & excessive smoking. This hot plate gas burner is a medium duty appliance capable of a wide variety of cooking applications. The gas valve control also functions as the ON/OFF control.

CLEANING INSTUCTIONS:

Return with no visible food, wipe clean.

For your safety:

1. Do not store flammable liquids near this unit.
2. Unit should only be used in a flat, level position.
3. Let hot unit cool before cleaning or moving.
4. Do not spray controls or outside of unit with liquids or cleaning agents.
5. Do not operate unattended.

If you smell gas:

- Do not attempt to light appliance.
- Disconnect fuel supply.
- Evacuate area, call for professional help.

"We Rent Celebrations!"

**IF EQUIPMENT IS WORKING INCORRECTLY,
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.**