

**PANCAKE DISPENSER**  
**Broadway Party & Tent Rental**  
**763-424-6155**  
www.BroadwayPartyRental.com



**OPERATING INSTRUCTIONS:** To change setting: Pull down on plastic dial until peg is released. Rotate dial to the desired setting and release it so the peg is re-engaged. Operate the dispenser while empty to make sure all parts move freely. Set the dial adjustment as needed. Fill the hopper. Depress operating knob all the way to remove all air from the valve. Hold dispenser 1 ½” over the frying surface and dispense batter. Move and dispense as needed. Refill the hopper as needed.

**CLEANING INSTRUCTIONS:** Clean dispenser immediately after use. **DO NOT** disassemble dispenser. Presoak in hot water to loosen dried on deposits. Rinse in clear hot water, wipe dry.

“We Rent Celebrations!”  
**IF EQUIPMENT IS WORKING INCORRECTLY,  
PLEASE CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.**