

# TOWABLE CHARCOAL GRILL

Broadway Party & Tent Rental

763-424-6155

www.BroadwayPartyRental.com

**QUICK FACTS:** A 300 lb pig can be cooked in the Towable Charcoal Grill.

**SET UP:** With a large amount of meat start with no more than 40 to 50 pounds of charcoal. Place charcoal in center of grill, light charcoal and wait for charcoal to get hot. Once hot, spread charcoal keeping larger amounts by biggest portions of meat. If it's necessary to add charcoal, pull screen forward with meat on it, add charcoal and move screen back.

**COOK TIME:** Time will vary depending on size of pig and weather conditions. (Approximately 1 hour of cooking time for every 15-20 pounds of meat.)

## **COOKING TIPS:**

1. Keep lid closed; only opening to baste and add seasoning.
2. The butcher should be able to advise and give instructions for the amount of time required to roast pig.
3. The pig does not have to be turned when roasting on screen, because the grill cooks like an oven and will cook pig evenly.
4. Check hams before removing pig from grill. Use gloves when removing pig from grill.

**OPTIONAL PREPARATION:** Punch holes with narrow, sharp knife and insert garlic cloves. Approximately 15 to 20 cloves will season a 300 pound pig. If another seasoning is desired, it may be added before or while cooking.

***Please return clean to avoid \$65 cleaning charge!  
There is a \$100 Fee for Charcoal removal.***

**CLEANING INSTRUCTIONS:** Return grill clean to avoid a cleaning charge. When finished cooking, remove screen to prevent grease from baking on. This will make your clean up MUCH easier! To clean screen, use a pressure washer and remove all pieces of meat and any visible grease left on screen. After charcoals cooled completely, remove all ash. Be certain to dispose of ash and charcoal in an appropriate manner. Tilt Grill backwards with lid open. Be sure to clean double floors of all ash. WARNING: Never pour water on hot coals to extinguish. This can warp and damage grill.

**Clean is defined as no visible food, grease or charcoal!**

**“We Rent Celebrations!”**

**IF EQUIPMENT IS WORKING INCORRECTLY,  
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.**