

# WARMER WITH PUMP

(3 ½ Quart)

**Broadway Party & Tent Rental**

**763-424-6155**

[www.BroadwayPartyRental.com](http://www.BroadwayPartyRental.com)

**ELECTRICAL:** Warmer is 110 to 120 volt, 7 AMP, 530 watts

**PARTS:** Warming Unit, Pump, Spacer, & Stainless-Steel Food Bowl

**OPERATING INSTRUCTIONS:** Fill Warming Unit with 1-1/3 quarts of hot water, place Spacer in Warming Unit and turn Warmer on. Place Food Bowl or #10 can with food into Warming Unit on top of spacer. If using Pump, **pre-heat fudge or cheese BEFORE inserting Pump.** Pump will not function if fudge or cheese is too thick. Place Pump into topping and pump / prime.

## HELPFUL HINTS:

1. The temperature point between figures "3 and 4" is approximately 145° F, the proper holding temperature for fudge
2. When dial is set at figure "5" the temperature is approximately 170° F, a good holding temperature for cheese sauce
3. **DO NOT** keep unit on high heat for more than 45 minutes, as food will over-cook!
4. Keep control knob at "LOW" when not in use
5. **DO NOT** allow unit to run dry of water or equipment may be damaged resulting in **extra charges!**

**CLEANING INSTRUCTIONS:** Return clean to avoid cleaning charges! Immediately after use (BEFORE food hardens or dries), empty remaining food, fill with warm, soapy water, and pump for 5 minutes. Empty unit and repeat.

**DO NOT** use scouring pads or any type of abrasive for cleaning.

**DO NOT DISASSEMBLE OR** take pump apart for cleaning.

If food product is not purchased with rental we cannot guarantee operation.

"We Rent Celebrations!"

IF EQUIPMENT IS WORKING INCORRECTLY,  
CONTACT BROADWAY PARTY & TENT RENTAL AS SOON AS POSSIBLE.